

INSTRUCTIONS

(Provided by U.S. Postal Service. Questions regarding mail service should be directed to your Post Office)

Whenever possible, boxes must be located so that carrier's vehicle is off pavement when serving them.

Box number must be painted on box in numerals not less than one inch high.

Post must be neat and of adequate strength and size.



Approach to box should be a hard level surface (gravel, cinders, stone).

Boxes must be placed to conform with state laws and highway regulations.



Suggested installation of a single box.

Suggested installation where snow removal is a problem.

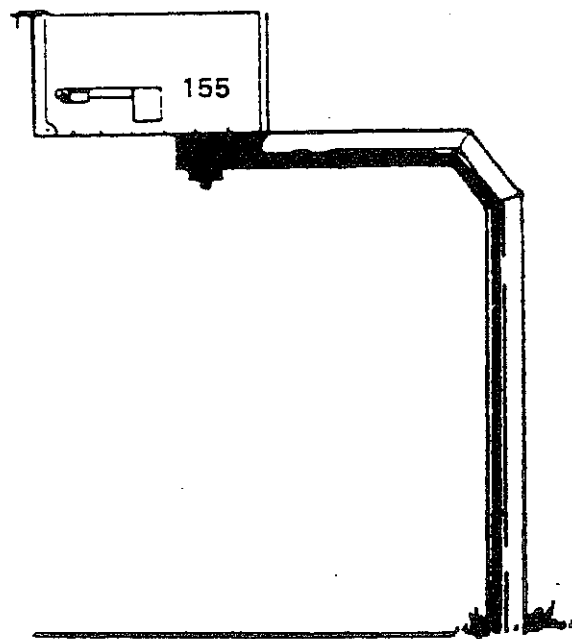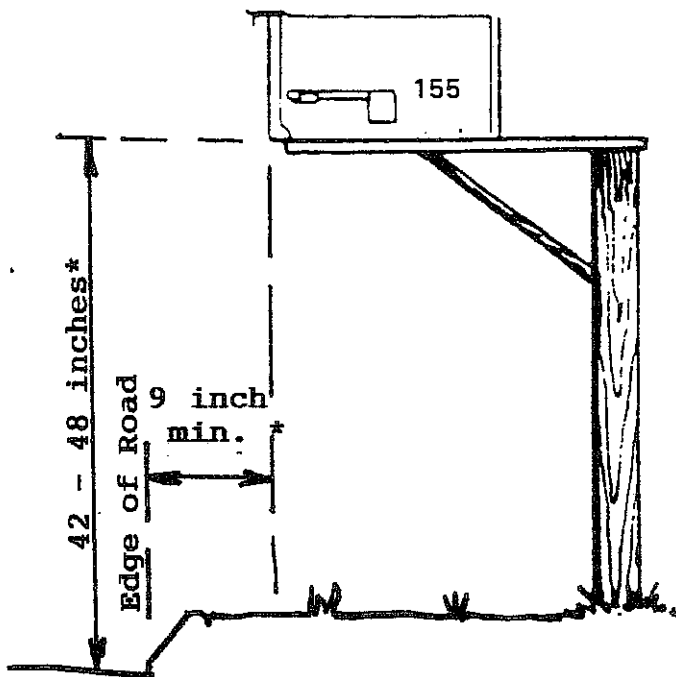

Road Surface

Extend box beyond end of post. Attach board holding box to post with screws or doublehead nails, permitting easy removal if necessary to adjust box height.

* established by Berlin Town Council 04/20/21, as recommended by U. S. Postal Service

PS Form 4056, Sep. 1987 (Reverse)

★U.S.GPO:1987-0-181-700/84788

(Enlarged and copied by Town of Berlin Public Works Dept.)